

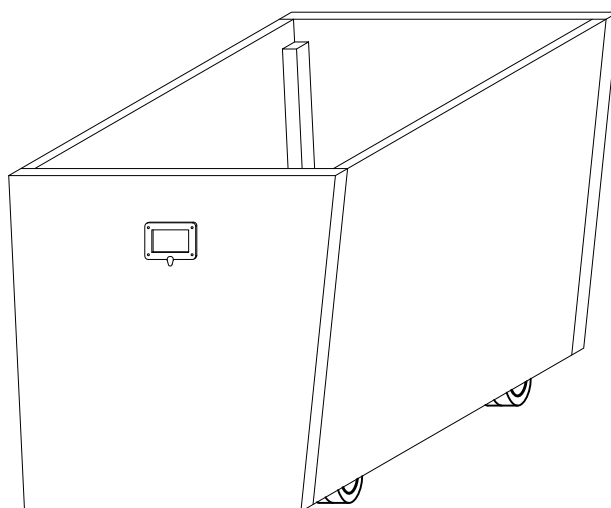
# HOME DECORATORS C O L L E C T I O N

BF-24911 MSL ROLLING BINS 13"W×14"D×14"H

INV#10380












## ASSEMBLY INSTRUCTIONS


Made In China



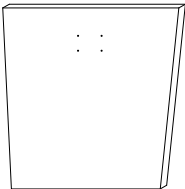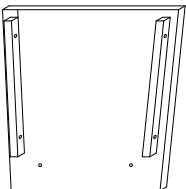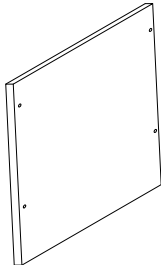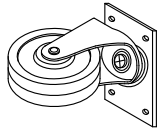Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.


**IMPORTANT NOTE:** Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

| PARTS LIST   |   |   |
|--|---|---|
| <b>A</b><br><br>FRONT PANEL-1PC               | <b>B</b><br><br>BACK PANEL-1PC                 | <b>C</b><br><br>SIDE PANELS-2PCS            |
| <b>D</b><br><br>BOTTOM PANEL-1PC            | <b>E</b><br><br>HANDLE-1PC                   | <b>F</b><br>5mm × 1/2 "<br><br>SCREWS-4PCS |
| <b>G</b><br><br>ALLEN WRENCH-1PC            | <b>H</b><br>11mm × 3/4 "<br><br>SCREWS-12PCS | <b>I</b><br><br>CASTERS-4PCS               |
| <b>J</b><br>8mm × 5/8 "<br><br>SCREWS-16PCS | <b>K</b><br><br>SCREW COVERS-12PCS           |   |

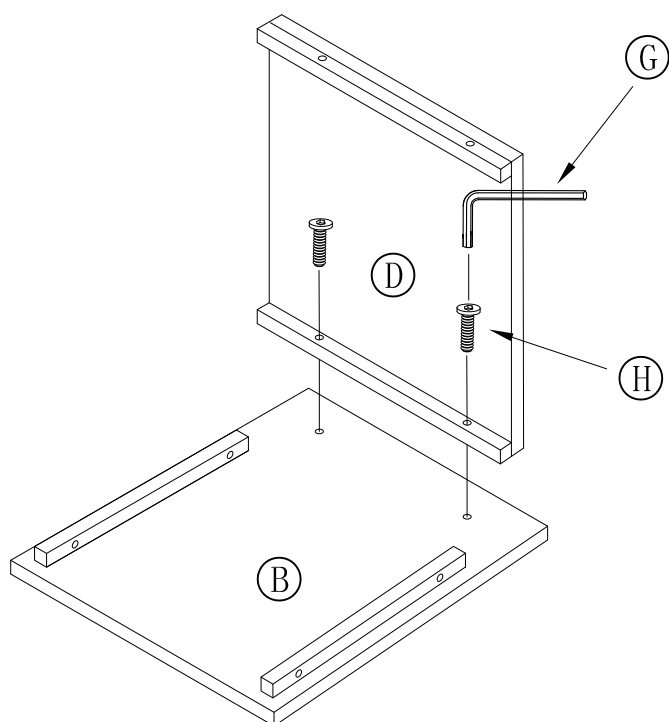


1 ). ASSEMBLE THE BOTTOM PANEL (D).

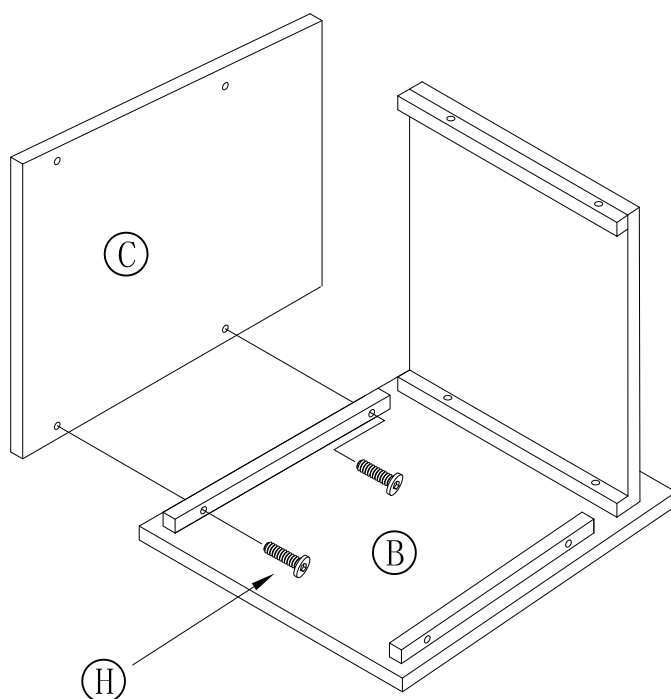- ATTACH THE BOTTOM PANEL (D) TO BACK PANEL (B) USING 2 SCREWS (H).




2 ). ASSEMBLE THE SIDE PANEL (C).

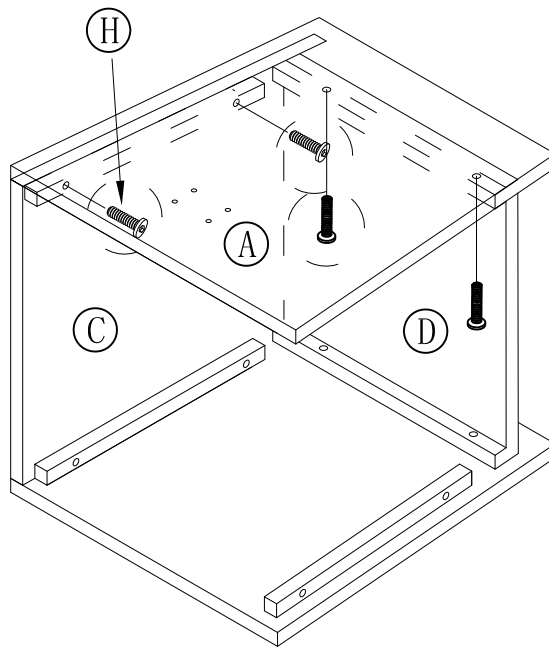- ATTACH THE SIDE PANEL (C) TO BACK PANEL (B) USING 2 SCREWS (H).




### 3 ). ASSEMBLE THE FRONT PANEL (A).

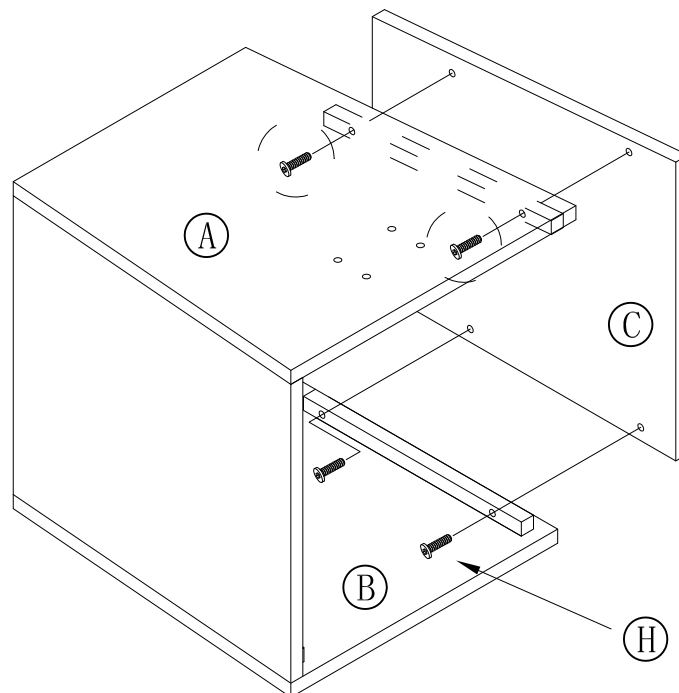- ATTACH THE FRONT PANEL (A) TO PANEL (C/D) USING 4 SCREWS (H).




### 4 ). ASSEMBLE THE SIDE PANEL (C).

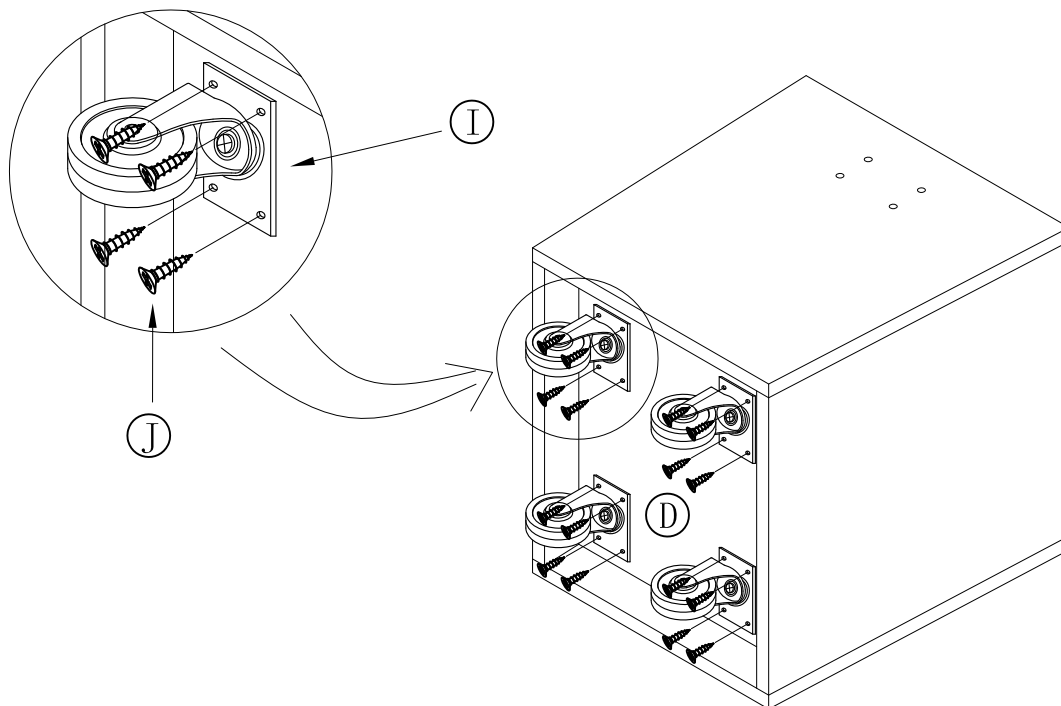- ATTACH THE SIDE PANEL (C) TO PANEL (A/B) USING 4 SCREWS (H).




#### 5 ). ASSEMBLE THE CASTERS (I).

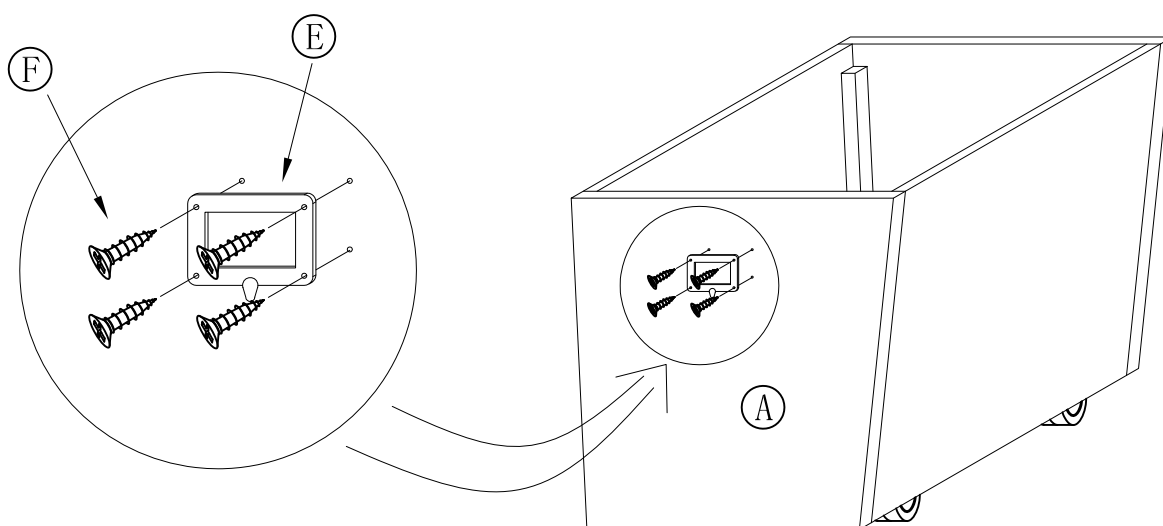- ATTACH THE 4 CASTERS (I) TO BOTTOM PANEL (D) USING 16 SCREWS (J).



#### 6 ). ASSEMBLE THE HANDLE (E).

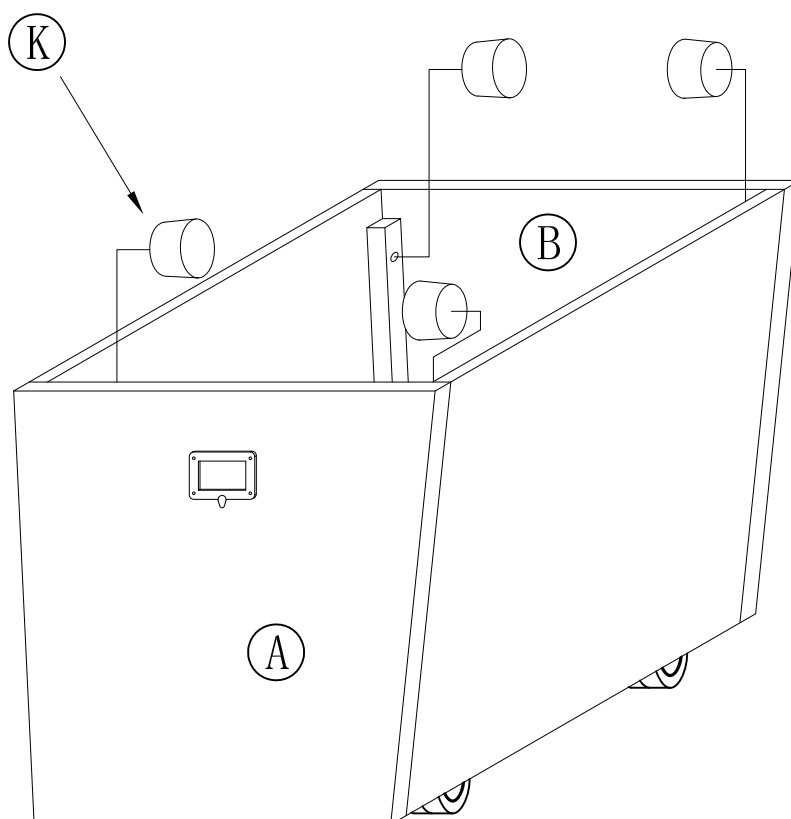- ATTACH THE HANDLE (E) TO FRONT PANEL (A) USING 4 SCREWS (F).



7 ). ASSEMBLE THE SCREW COVERS (K).

- INSERT THE 12 SCREW COVERS (K) INTO THE HOLES IN THE PANEL (A/B/D).